# Parts Chart

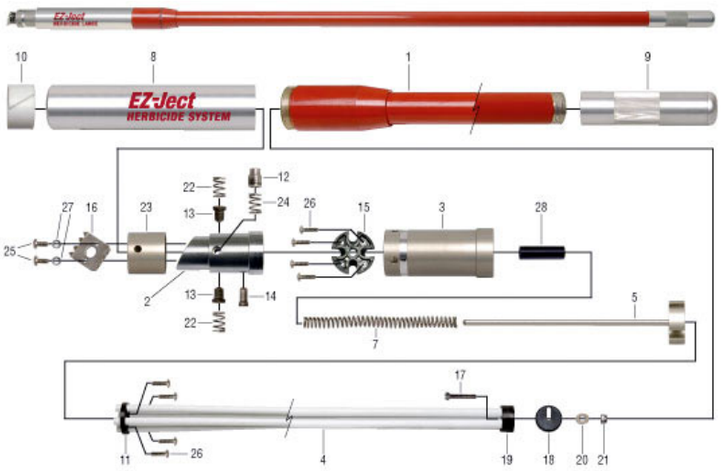


| Drawing # | # Part | Description |
|---|---|---|
| 1 | 1001a | *Handle Assembly — standard length 47.5" (120cm) |
| 1 | 1001b | *Handle Assembly — short length 25.25" (64cm) |
| 2 | 1002 | Injector Nose |
| 3 | 1003 | Injector Head |
| 4 | 1004a | *Shell Chamber Assembly — standard length 55" (140cm) |
| 4 | 1004b | *Shell Chamber Assembly — short length 32.5" (83cm) |
| 5 | 1005 | Injector Rod and Holder |
| 7 | 1007 | Injector Spring |
| 8 | 1008 | Head Sleeve |
| 9 | 1009 | End Cap |
| 10 | 1010 | Sleeve Bearing |
| 11 | 1011 | *Shell Chamber Retainer |
| 12 | 1012 | Index Button |
| 13 | 1013 | Shell Gate |
| 14 | 1014 | Interlock Pin |
| 15 | 1015 | *Head Insert |
| 16 | 1016 | Gripper Teeth |
| 17 | 1017 | *End Cap Pin |
| 18 | 1018 | *Shell Chamber Lid |
| 19 | 1019 | *Shell Chamber Cap |
| 20 | 1020 | *Rod Bushing |
| 21 | 1021 | *End Cap Nyloc Nut |
| 22 | 1022 | Shell Gate Spring |
| 23 | 1023 | Retainer Sleeve |
| 24 | 1024 | Index Button Spring |
| 25 | 1025 | Gripper Teeth Screws |
| 26 | 1026 | Shell Chamber Retainer and Injector Head Screws |
| 27 | 1027 | Gripper Teeth Lock Washers |
| 28 | 1028 | Injector Head Bushing |

*Not available as replacement parts.

Download Complete Guide: http://www.ezject.com/PDF/ezject_instruction_guide.pdf (336KB PDF)